Connector Views

43. Cruise Control Unit

– Blue
– Behind driver's dashboard lower cover, right of steering column
– On dashboard wire harness A

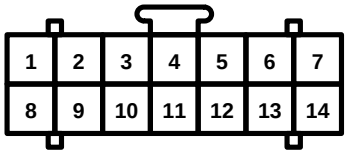

1 BRN (Actuator control)
2 GRY (Brake input)
3 BLK (G501)
4 —
5 WHT/BLK (Brake input)
6 LT GRN/RED (Set/cancel signal input)
7 LT GRN/BLK (Resume/cancel signal input)
8 A/T: BLU/GRN (Cruise control signal output)
9 BRN/WHT (Actuator control)
10 BLU/BLK (Indicator light control)
11 BRN/BLK (Actuator control)
12 BLU/WHT (Vehicle speed input)
13 LT GRN (Power input)
14 LT BLU (Disengage input)

©2002 American Honda Motor Co., Inc.